




E SaniStand® Hand Sanitizer Stand Assembly Instructions

SPECIFICATIONS

<u>Dimension</u>	<u>Imperial</u>	<u>Metric</u>
Height	52 in	132 cm
Width	29.5 in	75 cm
Depth	29.5 in	75 cm
Weight Empty	17 lb	7.71 kg

NOTE: All dimensions are subject to change due to environmental factors.

The E-Sanistand stores flat, can be easily assembled/disassembled, and is a great answer to an immediate need for hand sanitation. The mounting face of the stand can accommodate dispensers up to 6.70 in. (17 cm) wide. The unit can be assembled with the smooth finish out or a textured finish out.

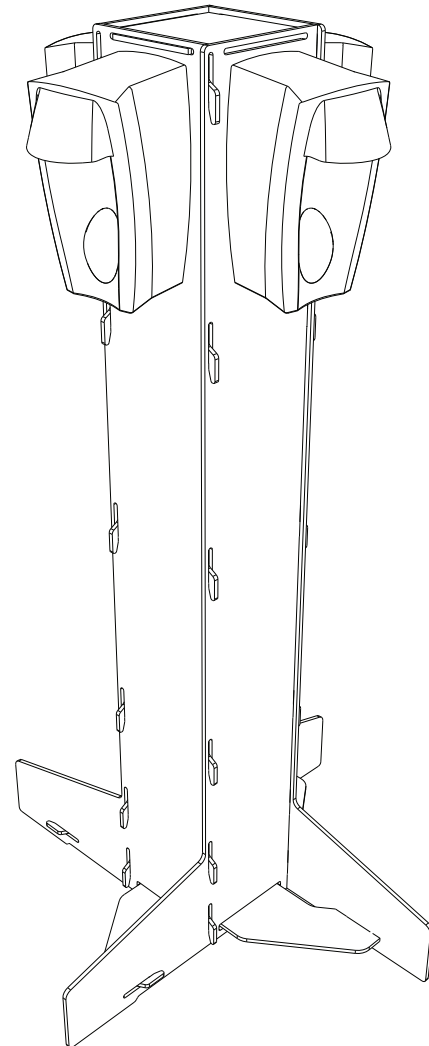

Shown with dispensers
Dispensers not included

POLYJOHN USA

PolyJohn Enterprises Corp
2500 Gaspar Ave.
Whiting, IN 46394
Phone: 800-292-1305
Fax: 219-659-0625
www.polyjohn.com
info@polyjohn.com

POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.
Equinox 1 Audby Lane
Wetherby, England LS22 7RD
Phone: 44 (0) 1937-583333
Fax: 44 (0) 1937-583322
www.polyjohn.co.uk
sales@polyjohn.co.uk



POLYJOHN CANADA

PolyJohn Canada
P.O. Box 2300
199 Forest Plain Rd.
Orillia, Ontario LV3 6S2
Phone: 800-465-9590
Fax: 705-325-8250
www.polyjohncanada.ca
info@polyjohncanada.ca

We recommend reading through the entire booklet prior to proceeding with use, service or maintenance.

Assembly Instructions



Step 1: Insert the tabs of one panel into the slots of a second panel and slide down into place. Repeat this step for the remaining panels.

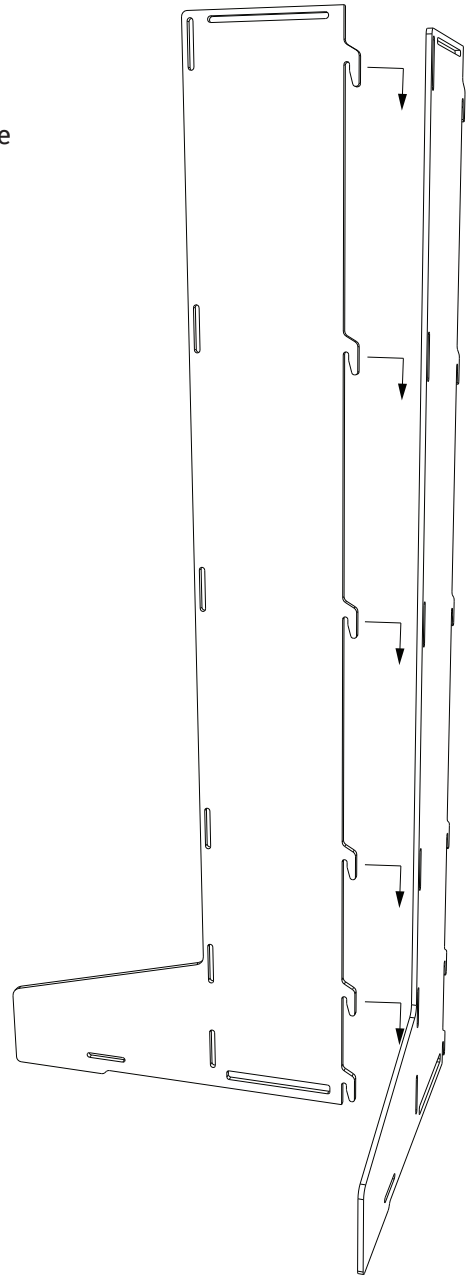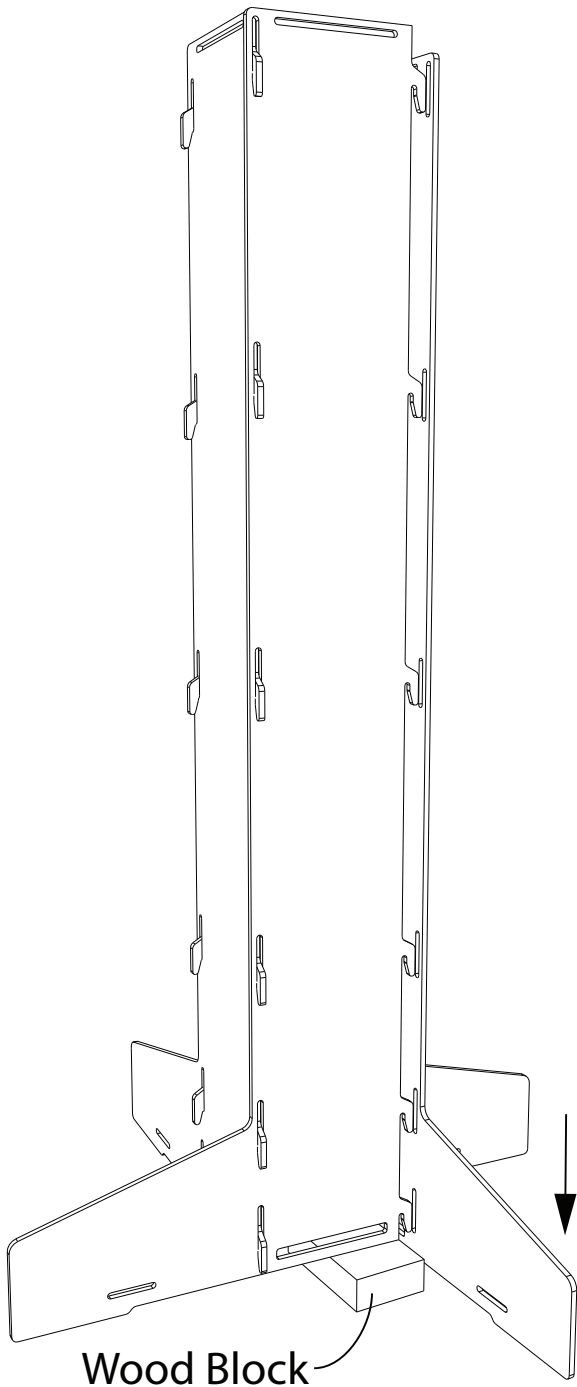

Step 2: For the final panel, You will need to twist the whole assembly to get the last tabs into the slots. To do this, place your foot or a piece of a 2 x 4 wood block under the panel with the tabs and push down on the panel with the slots. Place the bottom tab partially into the bottom slot but do not fully install it. This will hold the two panels into alignment and enable you to insert the remaining tabs into their corresponding slots. Once you have all the tabs inserted, you can 'pop' the tabs through the slots and the unit will fully engage.

Assembly Instructions Cont.

Step 3: Slide the leg brace into the slots located at the bottom of the panels and insert the tabs into the corresponding slots. Pull the tab into the slots. Repeat this for the other leg brace. You will have to guide the second brace under the first brace and into the slot of the side panel.

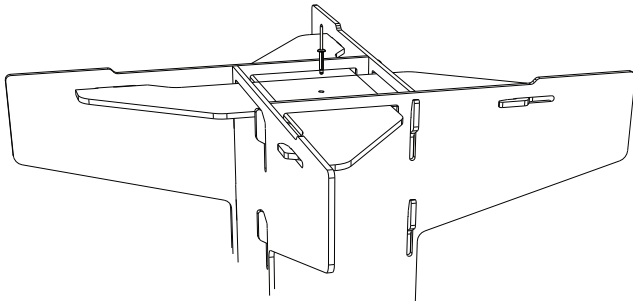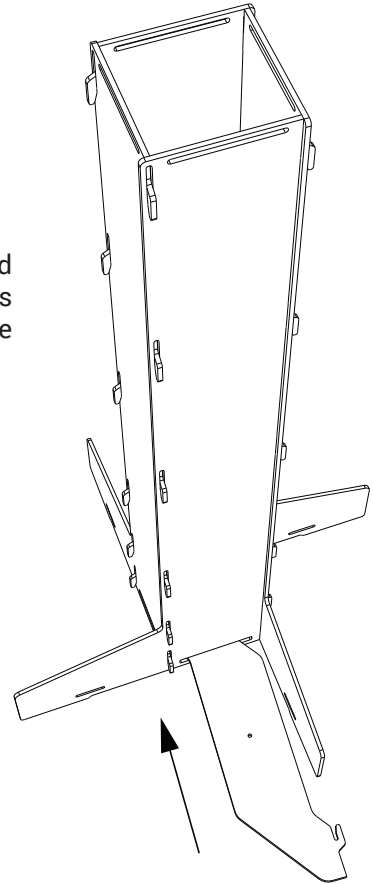


Step 4: Turn the unit upside down and line up the pre-drilled holes in the two leg braces. Fasten into place using the supplied PC-000105 rivet. If you would like to make the unit more easily disassembled, you could drive a 5/16 -18 x 3/4" bolt or screw into the two holes.

Step 5: Stand the unit upright. If you want to add a ballast of some sort (sandbag, gallon jug(s) of water/sand), do that now by sliding the ballast down into the center of the Sani Stand.

Step 6: Install your dispensers following the manufacturer's recommended installation instructions.

Step 7: Insert the tab on the top panel into one of the slots at the top of one of the sides. Using a screwdriver or other tool to pry with, pry the opposite side out so that the tab will insert into the corresponding slot.

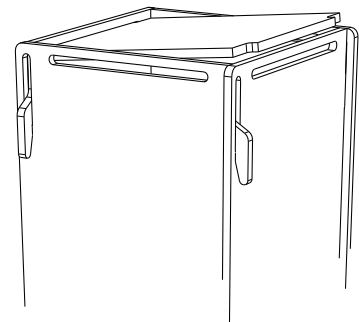

Assembly is complete

